



600W 2-IN-1 CORDED VACUUM CLEANER

INSTRUCTION MANUAL

Contents

Safety Introduction	2
Product Introduction	5
Product Operation	6
Product Maintenance	8
Trouble Shooting	9

Safety Introduction

1. Warning about improper use:

Under no circumstances should the appliance be used on the following:

- Liquids or wet materials (e. g. carpet shampoo when wet)
- Glowing ash, cigarette ends, matches etc.
- Combustible or inflammable substances
- Very fine dust (e. g. concrete dust) or toner
- Hard, pointed objects such as large splinters of glass

2. Risk to children

- Keep the appliance out of the reach of children. Improper use may result in injury or electric shock.
- Keep packaging away from children (risk of suffocation).
- This appliance is not designed to be used by people (including children) with limited physical, sensory or mental capabilities or people without adequate experience and/or understanding unless supervised by someone responsible for their safety.
- Children must be supervised to ensure that they do not play with the appliance.

3. Risk of electrocution

- Never immerse the appliance in water or other liquids as there is a risk of electric shock.
- Never touch the appliance with wet hands. Do not use the appliance outside or in rooms with high humidity levels.

- When using the appliance as a handheld vacuum cleaner to clean cars, make sure it is not exposed to rain or moisture.
- Never vacuum up liquids.
- Only store the appliance indoors in a dry place.
- Immediately remove the power plug from the electrical outlet in the event of any damage or malfunction.

CAUTION: Acute danger to life from electrocution! Never try to repair an electrical appliance yourself. For your own safety take or send it in to your nearest customer service center /specialist repair shop. This also applies to the power cable.

- Do not use the appliance if there is damage to the cable, plug or the vacuum cleaner itself.
- Never drag on the power cable or carry the appliance by the cable. Always handle the power cable with care. Make sure the cable does not get caught in doors or dragged over sharp edges or corners. Keep the cable away from hot surfaces.
- Before connecting the appliance to the electrical outlet, make sure the voltage matches the specifications on the nameplate of the appliance.
- The appliance must be switched off when the power plug is removed or inserted in the wall outlet.
- Disconnect the plug from the wall outlet during storms.
- When removing the plug from the outlet, always pull on the plug and NOT the cable, Only touch the plug with dry hands.
- The appliance should never be used outside.

4. Risk of injury

- Never hold the crevice nozzle close to the body or it may stick to the skin. If the nozzle does get stuck, set the On/Off switch to Off immediately.

5. Caution when in use


- After rinsing, the dust filter and motor protection filter must be completely dry before being reinserted.
- Only use the appliance again once it has been fully reassembled and both filters (dust filter and motor protection filter) have been reinserted.
- For your own safety, check the appliance for damage before use. If defective, the appliance should not be used until it has been repaired by a qualified technician. If the power cord is damaged, it should be replaced by a qualified technician to avoid risk.
- Once connected, the power cord should be placed so that no one can trip over them.
- Do not insert anything into the openings / nozzles of the appliance and make sure that they do not become blocked.
- Before changing nozzles, always switch the vacuum cleaner off beforehand.
- Never leave the appliance unattended when switched on.
- When interrupting work and after use switch the appliance off and unplug.
- Only use genuine manufacturer accessories.

Warning:

The plug must be removed from the power socket before any maintenance or replacement. If the power cord is damaged, replace them only by the factory or maintenance center or similarly qualified persons.

Product Introduction

- ① Handle
- ② Cord Holder
- ③ Detachable Rod Handle
- ④ Power Cord
- ⑤ Air outlet opening
- ⑥ Handle Locker
- ⑦ ON/OFF Switch
- ⑧ Dust Container Release Button
- ⑨ HEPA Filter
- ⑩ Dust Container
- ⑪ Main Brush
- ⑫ Crevice Tool

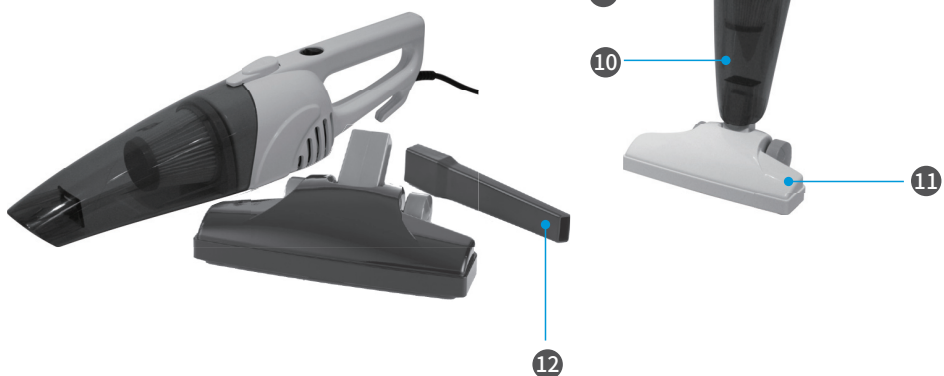

Product Operation

Assembly

Remove all parts from the packaging and place carefully on a flat area. If necessary, put protective sheeting underneath to avoid harm to easily damaged surfaces. Carefully remove all packing materials. Compare the contents with the list of parts.

01. Using as a handheld vacuum cleaner

The 2 in 1 Vacuum Cleaner is ready for use as a handheld appliance as soon as it has been unpacked.




02. Using as a floor vacuum cleaner

1. Open the little flap on the handle of the handheld vacuum cleaner.
2. Insert the rod handle in the opening in the handle and push in as far as it will go.
3. Press the flap against the adapter so that it snaps into place.
4. Open the flap.
5. Pull out the rod handle.
6. Close the flap on the handle again.



03. Accessories

1. The main brush is suitable for both carpets and hard floors
2. The crevice tool is designed for upholstery, cleaning the interior of cars and for getting into all corners and cracks that are inaccessible with the main brush or without a accessory.

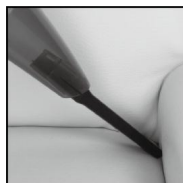

Before changing nozzles, always switch the vacuum cleaner off first.



Caution

Please slowly take up the cord, to avoid the power cord or power plug bruising human body or furniture in the process of taking up.

Product Operation

Preparing to use the appliance

Caution

1. Only switch the vacuum cleaner on once you have checked that all parts are fully assembled and all filters correctly inserted.
2. Under no circumstances should the appliance be used on the following:

- Liquids or wet materials (e. g. carpet shampoo when wet)
- Glowing ash, cigarette ends, matches etc.
- Combustible or in flammable substances
- Very fine dust (e. g. concrete dust) or toner
- Hard, pointed objects such as large splinters of glass

01. Start to use

1. Fit or remove the rod handle depending on whether you want to use the vacuum cleaner as a handheld or a floor appliance.
2. You can use the vacuum cleaner either without a accessory or fit one of the accessories to the suction opening.
3. To quickly unwind the cable from the floor vacuum cleaner, twist down the cord holder on the top handle.
4. Insert the power plug in a wall outlet.
5. Set the On/Off switch to ON.
6. Move the suction opening or nozzle over the surface to be cleaned.
7. After finishing vacuuming, set the ON/OFF switch to OFF and unplug
8. After use, always empty the dust collector and clean the dust filter.



02. Storage

1. Once you have fitted the rod handle, you can wind the cord around the two cord holders before putting away.
2. To quickly unwind the cable next time you use it, twist down the cord holder on the top handle.



Product Maintenance

Dust cup cleaning

Caution

1. Remove the power plug before cleaning and / or putting away.
2. Do not use caustic or abrasive products to clean the housing or you may damage the surface.
3. Never immerse the appliance in water.

01. Emptying dust collector and cleaning dust filter.

1. Hold down the unlocking button for the dust collector and carefully remove.
2. Hold the dust collector over a dustbin, carefully remove the dust filter and empty the dust collector.
3. Bang the dust filter gently.



4. Then wash the dust filter under cold running water.
CAUTION: Do not wash the dust filter in the washing machine.

5. Leave the dust filter to dry in the air for 24 hours until completely dry before reinserting.

CAUTION: Never use a hair dryer.

6. Press the dust filter firmly back into the dust collector so it fits closely all round the wall of the housing.

CAUTION: Never use the vacuum cleaner without the dust filter inserted.

7. First insert the dust filter in the bottom of the appliance and then close. Press the unlocking button for the dust collector to engage. The dust collector must have securely engaged at the top and bottom of the appliance.



02. Cleaning or replacing motor protection filter

1. Remove the motor protection filter from the appliance and bang off the dust.
2. Rinse with running water.
3. Then give the motor protection filter a good shake and leave to dry off completely.
CAUTION: Never insert the motor protection filter while still damp.
4. Check the motor protection filter for damage and replace with a new one if necessary.
5. Reinsert the motor protection filter.



TROUBLESHOOTING

In case of malfunction, please refer to the following table

Problem	Possible reason	Solution
The vacuum cleaner does not work	<ul style="list-style-type: none">- The power plug is not properly plugged into the socket- No electricity on the power socket- The vacuum cleaner switch is not turned on- Motor thermal protector acts	<ul style="list-style-type: none">- Reinsert the plug- Check the circuit breaker- Press the machine's power switch- Unplug the plug and wait for the thermal protector to recover
Suction becomes weaker	<ul style="list-style-type: none">- The main brush or accessories are clogged- Dust in the dust barrel is too full- Dust in the dust cup filter cotton is too much	<ul style="list-style-type: none">- Clean up the stemming- Timely clean up garbage- Clean the filter cotton

If the problem still can't be solved, please contact local service center.