




Electric Pressure Cooker

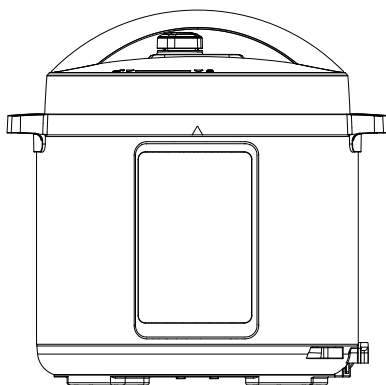

USER MANUAL

MY-CS6019WP

CONTENT

IMPORTANT SAFEGUARDS.....	1
Technical Data Of The Product	5
Product Structure.....	5
Instructions Before Use	6
Prepare For Cooking	8
Function Selection	10
Operation Guidelines	11
Keep Warm Function	18
Daily Check And Maintenance.....	18
Safety Precautions.....	19
Environment For Storing The Product	23
Clean After Use	23
Electrical Schematic Diagram.....	23
Troubleshooting	24

IMPORTANT NOTE: Please read the manual carefully before operating your product. Retain it for future reference.

(Picture are for reference only, atual product may differ from picture shown)

IMPORTANT SAFEGUARDS

Caution

1. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacture or its service agent.
2. This appliance is for household use only. Do not use outdoors.
3. Children should be supervised to ensure that they do not play with the appliance
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Do not immerse any part of the appliance in water or other liquid.
6. Please turn off and unplug the appliance before cleaning, maintenance or relocation and whenever it is not in use.
7. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
8. The pressure regulator allowing the escape of steam should be checked regularly to ensure that they are not blocked.
9. State that the container must not be opened until the pressure has decreased sufficiently.
10. The appliance is not intended to be operated by means of an external timer or a separate remote-control system.

IMPORTANT SAFEGUARDS

Caution

11. Cooking appliances should be positioned in a stable situation with the handles positioned to void spillage of the hot liquids.
12. The heating element surface is subject to residual heat after use, do not touch.
13. The cooker cannot gain pressure when the lid is not well closed and the lid cannot be opened when the inner pressure is too high.
14. Do not let children near the pressure cooker when in use.
15. Do not put the pressure cooker into a heated oven.
16. Move the pressure cooker under pressure with the greatest care. Do not touch hot surfaces. Use the handles and knobs. If necessary, use protection.
17. Do not use the pressure cooker for a purpose other than the one for which it is intended.
18. This appliance cooks under pressure. Scalds may result from inappropriate use of the pressure cooker. Make sure that the cooker is properly closed before applying heat, see “instructions for use”.
19. Never forces open the pressure cooker. Do not open before making sure that its internal pressure has completely dropped. See the “instructions for use”.
20. Never use your pressure cooker without adding water or food, except the Sauté function, this would seriously damage it.
21. Do not fill the cooker beyond 2/3 of its capacity. When cooking foodstuffs which expand during cooking, such as rice or dehydrate vegetables, do not fill the cooker to more than half of its capacity.
22. Use the appropriate heat source(s) according to the instructions for use.

IMPORTANT SAFEGUARDS

Caution

23. After cooking meat with a skin (e.g. ox tongue) which may swell under the effect of pressure, do not prick the meat which the skin is swollen; you might be scalded.
24. When cooking doughy food, gently shake the cooker before opening the lid to avoid food ejection.
25. Before each use, check that the valves are not obstructed. See the instructions for use.
26. Never use the pressure cooker in its pressurized mode for deep or shallow frying of food.
27. Do not tamper with any of the safety systems beyond the maintenance instructions specified in the instructions for use.
28. Only use manufacturer's spare parts in accordance with the relevant model. In particular, use a body and a lid from the same manufacturer indicated as being compatible.
29. KEEP THESE INSTRUCTIONS.
30. Warning: Avoid spillage on the connector.
31. Warning: Misuse may cause potential injury.

IMPORTANT SAFEGUARDS

Warning

1. When discharging keep your face or hand away from the relief pipe and from the lid during operation to avoid scald.
2. Unplug appliance from mains electricity supply before taking food.
3. Don't touch the lid during cooking procedure or in heating status.
4. Never block the periphery of the clamping position to ensure safety.
5. Never attempt to uncover the cooker when floating valve is flopping or pressure inside.
6. Please mind of flowing hot water from the pressure discharging valve when open the cover.

Environmental protection




The appliance must not be disposed of with regular household waste. At the end of its service life, the appliance must be properly delivered to a collection point for the recycling of electrical and electronic equipment. By Collection and recycling of old appliances, you are making an important contribution to the conservation of our natural resources and provide for environmentally sound and healthy disposal.

Technical Data Of The Product

Model	Capacity	Power Supply	Rated Power	Size of Inner Pot	Working Pressure	Keep Warm Temperature
MY-CS6019WP	6 L	220-240V~ 50-60Hz	1000W	8.66"	70kPa	140° F~176° F
Accessories	<div> <div>Spoon</div> <div>Soup Spoon</div> <div>User Manual</div> <div>Measuring cup</div> <div>Power Cord Components</div> </div>					


Product Structure

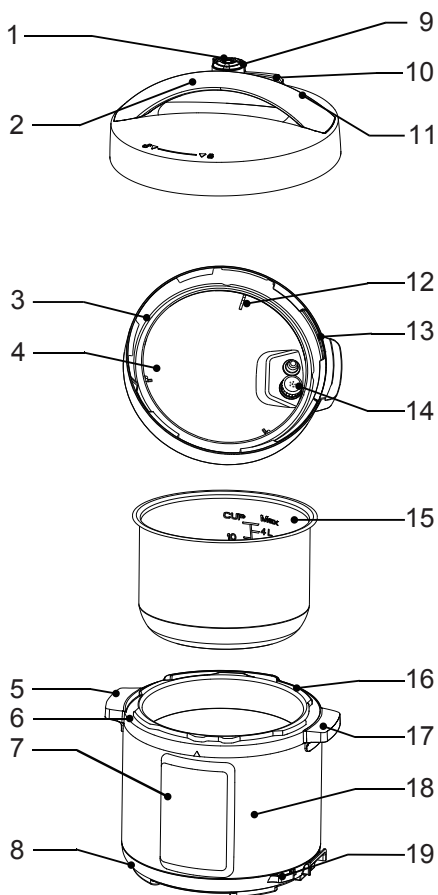

No.	Description
1	Exhaust valve handle
2	Upper cover handle
3	Seal ring
4	Internal side of lid
5	③Water box(note)
6	Housing cover
7	Control Box
8	Base
9	Exhaust opening
10	Float valve
11	①Exhaust valve(note)
12	Seal ring bracket
13	②Sealing gate (note)
14	Block proof cover
15	Inner pot
16	Outer pot
17	Cooker body handle
18	Cooker body
19	Power cord socket

Product Structure

Structural diagram of float valve

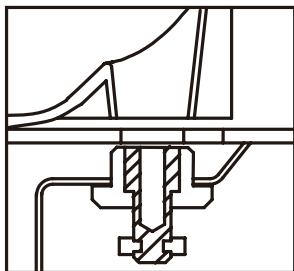

Tips:

1. Confirm that the float valve, block proof cover and seal ring are correctly installed before use each time;
2. Before putting the inner pot into the cooker each time, please remove the dirt and water from the external side of the inner pot and internal side of the external pot;
3. Please move the product with the handle of the cooker body;
4. Please remove the water from the housing cover with cloth.

Note:


- ① Exhaust valve: Pull out the exhaust valve from the lid. Clean the internal side of the exhaust valve and the exhaust valve and float valve of the lid with brush and cloth at least once a month.
- ② Sealing gate: Please remove oil and dirt from the sealing gate with detergent and brush. The remained oil and dirt in it may appear in yellowish. After washing, it may recover to the original color as stainless steel. It is suggested to clean the sealing gate once every 2 months.
- ③ Water box: After cooking, the steam may stay in the water box of the external pot as water. Water in the box should be removed for avoiding bad odor, please clean it with clean cloth.

Instructions Before Use

When use for the first time, please take out all accessories from the cooker body, read the User Manual carefully, particularly for the usage and cautions for avoiding property loss or physical injury for you.

Instructions Before Use

Operation Part

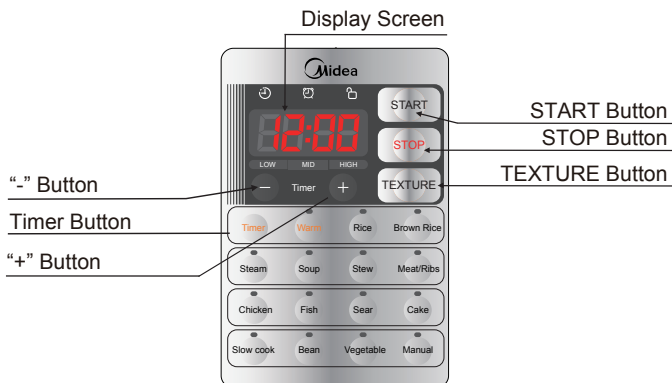

Optional pressure maintaining function

This function allows adjusting the “TEXTURE” according to the personal requirement by pressing “TEXTURE” button.

Cooking Timer Function

If the pressure maintaining time is adjusted by pressing “+”/ “-” button, it requires entering into the “Manual” state.

Delay Timer Function

 
Set the time of finishing cooking by pressing the “+”/“-” button.

Disassemble and install the block proof cover and seal ring

Disassemble and install the block proof cover

Disassemble

Pull it out upwards



Install

Press it down to install




1. Check if the seal ring and block proof cover are correctly installed in the upper cover before use each time.
2. After use, please clean the seal ring and around of block proof cover for avoiding jamming the cover, keep it clean to avoid bad odor.

Disassemble and install the seal ring


Disassemble

Pull it out upwards

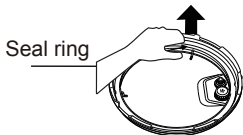

Install

Press it down to install

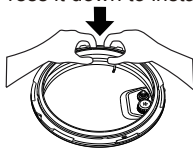

1. Please do not pull the seal ring, otherwise, the distorted seal ring may influence the seal ring and pressure effect.
2. Do not use the damaged seal ring, please replace it at the authorized repair office.

Instructions Before Use

Use and maintain the stainless inner pot

1. Do not empty

It may cause yellowish and spotted inner pot or distorted bottom if it is empty for a long time.

2. Do not use it to store the acid, alkali and preserved foods for a long period

Although the inner pot has excellent anti-corrosion performance, it may cause corrosion of certain degree, the suggested time of keep warm shall not exceed 24h.

3. Keep it clean to prolong the service life

Do not immerse it in water for a long period.

Clean the inner pot with soap, weak detergent or warm water to remove dust, oil and dirt.

4. Do not scratch it with steel shovel

Soften the burnt foods on the bottom with water and then remove it.

Tips:

The bright inner pot has smooth and polished surface before use. After using for a long period, the surface will become unclear with signs after it is washed with hard object. It is normal and won't influence the function of the product.

(User shall read this function selectively according to the product model and configuration.)


Prepare For Cooking

1 Opening the lid correctly

- Hold the handle of upper cover, turn it anticlockwise for about 30° till the “▼” mark on the edge of the upper cover aiming at the “▲” mark on the edge of the housing cover, and then lift the upper cover.

2 Check if the parts and accessories of lid are well installed

- Check if the floater valve and exhaust valve are jammed, confirm if the sealing ring and block proof cover are well installed.

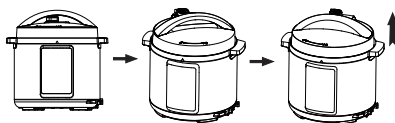

Prepare For Cooking

3. Take out the inner pot, put the foods and water into the inner pot

- The total amount of foods and water shall not exceed the Max marked on the inner pot.
- The max rice and water amount when cooking shall not exceed the Max on the inner pot.

4 Put the inner pot into the cooker





- Wipe to clean the external surface of inner pot, foreign object and water are not allowed on the inner surface of electric pressure cooker;
- Turn the inner pot to left and right to ensure good contact with the heating plate.

5 Safely close the lid

- Before closing the lid, check if the sealing ring is well installed.
- Hold the handle of upper cover, aim the “▼” mark on the edge of the upper cover aiming at the “▲” mark on the edge of the housing cover, put the top cover horizontally on the cooker body, turn the upper cover clockwise for about 30° to the lock place, and aim the “▲” mark on the edge of the housing cover at the “⊗” mark on the lid.

6 Put the exhaust valve well

- When working, please turn the exhaust valve to the sealing place, which means the electric pressure cooker keeps at sealing state;
- For manual exhaust, please turn the exhaust valve handle to the exhaust place, the electric pressure cooker keeps at the exhaust state; when exhausting, do not keep the hands or face above the exhaust opening;
- Check if the floater valve drops down before working (before heating, the floater valve is down).

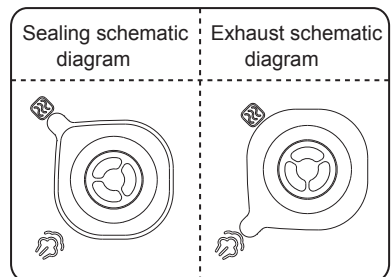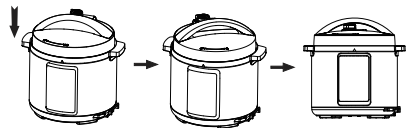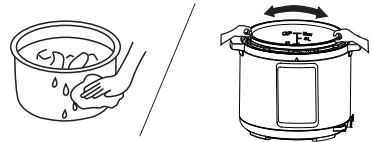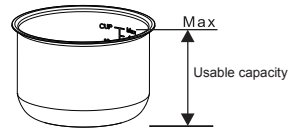

Function Selection

General Function

1. Prepare for cooking according to the method listed on Page 8.
2. Switch on If the buttons are inactive when use, please confirm if the lid is closed at the right place, the buttons are inactive if the lid is not closed correctly for product of this series.
3. Under standby state, when you press the button, the corresponding indicator will turn on. The "TEXTURE" light is on. Press "TEXTURE" you can choose "LOW", "MID" OR "HIGH". Then press "START", it starts to cook. When the pressure goes up and become set-up pressure, it becomes stable. It will show the timetable and count down.
4. After cooking, the cooker may automatically enter into the keep warm state. The time of keep warm shall not exceed 24h.
5. After cooking, the indicator of corresponding function lights off, the keep warm indicator lights on, the cooker makes sound and enters into the keep warm state. Under the standby state, press the "Warm" button, the keep warm indicator lights on, the cooker makes sound and enters into the keep warm state.

Tips:

Under any state, press the "STOP" button to cancel the current work state and return standby state.

When the cooker is working, it is normal that it makes "cluck" sound, please set your heart at relax when use.



To cook a small amount of foods, the inner pot may possibly be lifted when opening the lid, please shake the lid to drop the inner pot in the cooker body and then remove the lid.

Function Selection





Safely open the lid

1. Cut off power supply or remove the power plug
2. Exhaust method
 - A. Quickly open the lid
Turn the exhaust valve to the exhaust place for exhausting, till the float valve drops down. (For non-fluid foods)
 - B. Generally open the lid
Keep the electric pressure cooker cool naturally till the float valve drops down.
3. Open the lid
Turn the upper cover anticlockwise with the left hand, turn it to the cover open limit place, lift the upper cover with the right hand to open the lid.
Do not open the lid before the pressure in the pot has been completely released, do not open the lid fiercely if it is difficult to open.
Do not pull out the exhaust valve when turning the exhaust valve.
After cooking fluid foods (porridge and soup), do not turn the exhaust valve, please cut off power supply to make it cool naturally till the float drops before opening the lid.
After cooking a large amount of foods, please do not immediately exhaust, it is suggested to keep warm for a certain moment before opening the lid.






Operation Guidelines

Function	Operation Guidelines
Standby	With the power on, the product automatically runs into the standby state with the digital screen shows “----”
Rice	<ol style="list-style-type: none">1. Under standby state, press the “Rice” button, the “Rice” light is twinkle and the “MID” light is on, you can get the different texture form “HIGH” to “LOW” by pressing the “TEXTURE” Button. Press the “START” button, the product automatically starts cooking. The digital screen starts countdown as soon as the pressure rise to working pressure with the icon  on .2. Preset cooking: Under the standby state, press the “Rice” button then press the “Timer” button with the icon  twinkle and the digital screen shows the preset time “02:00”. Press the “Timer” button to switch between Hour and Minute, then press the “+” or “-” button to add or minus the preset time with a range from 2H to 24H. Press the “START” button, the unit starts






Operation Guidelines

Function	Operation Guidelines
Rice	<p>counting the delay time down. When it countdown to the end, the program gets done. automatically starts preset cooking at “Rice”, the digital screen displays the finishing time and starts countdown.</p> <p>3. Quit cooking: Press the “STOP” button to quit the working program.</p>
Brown Rice	<p>1. Under standby state, press the “Brown Rice” button, the “Brown Rice” light is twinkle and the “MID” light is on, you can get the different texture form “HIGH” to “LOW” by pressing the “TEXTURE” Button. Press the “START” button, the product automatically starts cooking. The digital screen starts countdown as soon as the pressure rise to working pressure with the icon  on.</p> <p>2. Preset cooking: Under the standby state, press the “Brown Rice” button then press the “Timer” button with the icon  twinkle and the digital screen shows the preset time “02:00”. Press the “Timer” button to switch between Hour and Minute, then press the “+” or “-” button to add or minus the preset time with a range from 2H to 24H. Press the “START” button, the unit start counting the delay time down. When it countdown to the end, the program gets done.</p> <p>3. Quit cooking: Press the “STOP” button to quit the working program.</p>
Steam	<p>1. Under standby state, press the “Steam” button, the “Steam” light is twinkle and the “MID” light is on, you can get the different texture form “HIGH” to “LOW” by pressing the “TEXTURE” Button. Press the “START” button, the product automatically starts cooking. The digital screen starts countdown as soon as the pressure rise to working pressure with the icon  on.</p> <p>2. Preset cooking: Under the standby state, press the “Steam” button then press the “Timer” button with the icon  twinkle and the digital screen shows the preset time “02:00”. Press the “Timer” button to switch between Hour and Minute, then press the “+” or “-” button to add or minus the preset time with a range from 2H to 24H. Press the “START” button, the unit starts counting the delay time down. When it countdown to the end, the program gets done.</p> <p>3. Quit cooking: Press the “STOP” button to quit the working program.</p>




Operation Guidelines

Function	Operation Guidelines
Soup	<ol style="list-style-type: none"> 1. Under standby state, press the “Soup” button, the “Soup” light is twinkle and the “MID” light is on, you can get the different texture form “HIGH” to “LOW” by pressing the “TEXTURE” Button. Press the “START” button, the product automatically starts cooking. The digital screen starts countdown as soon as the pressure rise to working pressure with the icon  on. 2. Preset cooking: Under the standby state, press the “Soup” button then press the “Timer” button with the icon  twinkle and the digital screen shows the preset time “02:00”. Press the “Timer” button to switch between Hour and Minute, then press the “+” or “-” button to add or minus the preset time with a range from 2H to 24H. Press the “START” button, the unit starts counting the delay time down. When it countdown to the end, the program gets done. 3. Quit cooking: Press the “STOP” button to quit the working program.
Stew	<ol style="list-style-type: none"> 1. Under standby state, press the “Stew” button, the “Stew” light is twinkle and the “MID” light is on, you can get the different texture form “HIGH” to “LOW” by pressing the “TEXTURE” Button. Press the “START” button, the product automatically starts cooking. The digital screen starts countdown as soon as the pressure rise to working pressure with the icon  on. 2. Preset cooking: Under the standby state, press the “Stew” button then press the “Timer” button with the icon  twinkle and the digital screen shows the preset time “02:00”. Press the “Timer” button to switch between Hour and Minute, then press the “+” or “-” button to add or minus the preset time with a range from 2H to 24H. Press the “START” button, the unit starts counting the delay time down. When it countdown to the end, the program gets done. 3. Quit cooking: Press the “STOP” button to quit the working program.
Meat/Ribs	<ol style="list-style-type: none"> 1. Under standby state, press the “Meat/Ribs” button, the “Meat/Ribs” light is twinkle and the “MID” light is on, you can get the different texture form “HIGH” to “LOW” by pressing the “TEXTURE” Button. Press the “START” button, the product automatically starts cooking. The digital screen starts countdown as soon as the pressure rise to working pressure with the icon  on .





Operation Guidelines

Function	Operation Guidelines
Meat/Ribs	<ol style="list-style-type: none"> 2. Preset cooking: Under the standby state, press the “Meat/Ribs” button then press the “Timer” button with the icon  twinkle and the digital screen shows the preset time “02:00”. Press the “Timer” button to switch between Hour and Minute, then press the “+” or “-” button to add or minus the preset time with a range from 2H to 24H. Press the “START” button, the unit starts counting the delay time down. When it countdown to the end, the program gets done. 3. Quit cooking: Press the “STOP” button to quit the working program.
Chicken	<ol style="list-style-type: none"> 1. Under standby state, press the “Chicken” button, the “Chicken” light is twinkle and the “MID” light is on, you can get the different texture form “HIGH” to “LOW” by pressing the “TEXTURE” Button. Press the “START” button, the product automatically starts cooking. The digital screen starts countdown as soon as the pressure rise to working pressure with the icon  on. 2. Preset cooking: Under the standby state, press the “Chicken” button then press the “Timer” button with the icon  twinkle and the digital screen shows the preset time “02:00”. Press the “Timer” button to switch between Hour and Minute, then press the “+” or “-” button to add or minus the preset time with a range from 2H to 24H. Press the “START” button, the unit starts counting the delay time down. When it countdown to the end, the program gets done. 3. Quit cooking: Press the “STOP” button to quit the working program.
Fish	<ol style="list-style-type: none"> 1. Under standby state, press the “Fish” button, the “Fish” light is twinkle and the “MID” light is on, you can get the different texture form “HIGH” to “LOW” by pressing the “TEXTURE” Button. Press the “START” button, the product automatically starts cooking. The digital screen starts countdown as soon as the pressure rise to working pressure with the icon  on. 2. Preset cooking: Under the standby state, press the “Fish” button then press the “Timer” button with the icon  twinkle and the digital screen shows the preset time “02:00”. Press the “Timer” button to switch between Hour and Minute, then press the “+” or “-” button to add or minus the preset time with a range from 2H to



Operation Guidelines

Function	Operation Guidelines
Fish	<p>24H. Press the “START” button, the unit starts counting the delay time down. When it countdown to the end, the program gets done.</p> <p>3. Quit cooking: Press the “STOP” button to quit the working program.</p>
Sear	<p>Under standby state, press the “Sear” button, the “Sear” light is twinkle and the digital screen shows “0:20”, also you can get the different texture form “HIGH” with the screen shows “0:30” to “LOW” with the screen shows “0:10” by pressing the “TEXTURE” Button. Press the “START” button, the product automatically starts cooking. The digital screen starts countdown e with the icon  on. And quit the cooking by pressing the “STOP” button.</p>
Cake	<p>Under standby state, press the “Cake” button, the “Cake” light is twinkle and the “MID” light is on, also you can get the different texture form “HIGH” to “LOW” by pressing the “TEXTURE” Button. Press the “START” button, the product automatically starts cooking. The digital screen starts countdown e with the icon  on.</p>
Slow Cook	<p>Under standby state, press the “Slow Cook” button, the “Slow Cook” light is twinkle and the digital screen shows “6:00”, also you can get the different texture form “HIGH” with the screen shows “8:00” to “LOW” with the screen shows “4:00” by pressing the “TEXTURE” Button. Press the “START” button, the product automatically starts cooking. The digital screen starts countdown e with the icon  on. And quit the cooking by pressing the “STOP” button.</p>

Operation Guidelines

Function	Operation Guidelines
Bean	<ol style="list-style-type: none"> 1. Under standby state, press the “Bean” button, the “Bean” light is twinkle and the “MID” light is on, you can get the different texture form “HIGH” to “LOW” by pressing the “TEXTURE” Button. Press the “START” button, the product automatically starts cooking. The digital screen starts countdown as soon as the pressure rise to working pressure with the icon  on. 2. Preset cooking: Under the standby state, press the “Bean” button then press the “Timer” button with the icon  twinkle and the digital screen shows the preset time “02:00”. Press the “Timer” button to switch between Hour and Minute, then press the “+” or “-” button to add or minus the preset time with a range from 2H to 24H. Press the “START” button, the unit starts counting the delay time down. When it countdown to the end, the program gets done. 3. Quit cooking: Press the “STOP” button to quit the working program.
Vegetable	<ol style="list-style-type: none"> 1. Under standby state, press the “Vegetable” button, the “Vegetable” light is twinkle and the “MID” light is on, you can get the different texture form “HIGH” to “LOW” by pressing the “TEXTURE” Button. Press the “START” button, the product automatically starts cooking. The digital screen starts countdown as soon as the pressure rise to working pressure with the icon  on. 2. Preset cooking: Under the standby state, press the “Vegetable” button then press the “Timer” button with the icon  twinkle and the digital screen shows the preset time “02:00”. Press the “Timer” button to switch between Hour and Minute, then press the “+” or “-” button to add or minus the preset time with a range from 2H to 24H. Press the “START” button, the unit starts counting the delay time down. When it countdown to the end, the program gets done. 3. Quit cooking: Press the “STOP” button to quit the working program.

Operation Guidelines

Function	Operation Guidelines
Manual	<ol style="list-style-type: none"> 1. Under standby state, press the “Manual” button, the “Manual” light is twinkle and the digital screen shows the default working time “30”, also you can adjust the working time by pressing the “+” or “-” button with a range from the 0-60. Press the “START” button, the product automatically starts cooking. The digital screen starts countdown as soon as the pressure rise to working pressure with the icon  on. 2. Preset cooking: Under the standby state, press the “Manual” button then press the “Manual” button with the icon  twinkle and the digital screen shows the preset time “2:00”. Press the “Timer” button to switch between Hour and Minute, then press the “+” or “-” button to add or minus the preset time with a range from 2H to 24H. Press the “START” button, the unit starts counting the delay time down. When it countdown to the end, the program gets done. 3. Quit cooking: Press the “STOP” button to quit the working program.
Warm	<p>Under the standby state, press the “Warm” button to enter into keep warm state. “Warm” indicator light is twinkle and the digital screen show “---”, then press the “START” button to get working with a maximum 24H, after that the unit automatically gets into the standby state. And quit the working by pressing “STOP” button.</p>

Keep Warm Function



1. After cooking, the electric pressure cooker automatically enters into the keep warm state; Under keep warm state, keep warm indicator lights on;
2. Under standby state, you may also press the “ Warm” button to keep warm;
3. Keep warm temperature is 140°F~176°F;

Daily Check And Maintenance










For use the product safely with a longer service life, please carefully check and maintain it.

If followings occur	Solutions
<ul style="list-style-type: none">• Power cord and plug is expanded, deformation, damaged and it color is changed.• One part of the power cord and plug are hotter.• Power cord is flexible with discontinuous power supply.• The electric pressure cooker has abnormal heating and generates bad odor.• There's abnormal noise or vibration when supply power.	Stop using, and repair it by the authorized repair center.
<ul style="list-style-type: none">• There's dust or dirt on the plug or socket.	Remove the dust or dirt.

Safety Precautions

To avoid personal injury and property loss, be sure to observe the following safety precautions.

• Meanings of the marks:

 Means “Forbidden” items	 General Forbid	 Disassemble Forbidden	 Wet hands Forbidden
	 Contact Forbidden	 Spray Water Forbidden	
 Means “Mandatory” items	 Must be executed	 Remove the power plug	

• The danger caused by mistaken use if following warnings are neglected includes to two grades



Warning

It may possibly cause death or serious injury if the warming items are disobeyed.




Caution

It may cause physical injury or property damage if the caution items are disobeyed.




Warning

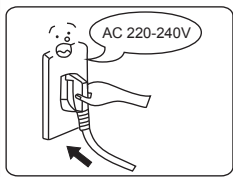

Use 220-240V~50-60Hz power outlet




- Failure to use AC 220- 240V~ 50-60Hz electricity can cause fire or electric shock.
- Danger of fire if the bad socket is adopted.

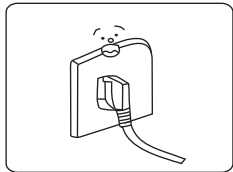

A socket shall be used alone



- A socket of more than 10A rated current with ground- ing wire shall be used alone;
- If shared with other electrical appliances, the socket may cause abnormal heat and result in fire.

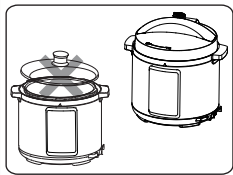


It is strictly prohibited to use other lid



- It is strictly prohibited to use other lid for heating, and in the (switching on) process, the use of non-original lid is not allowed.
- As this may cause electric shock or safety hazards.


Safety Precautions

Warning

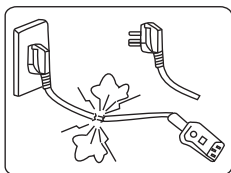


Stop using if the power cord is damaged

- Replace the damaged power cord with special soft cord or replace it with special assembly purchased from the manufacturer or authorized repair center.

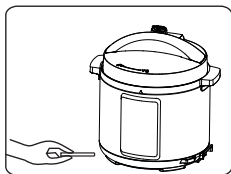


Do not put foreign objects

- It is prohibited to insert metal shavings, needles and other foreign matter in the gap.
- As this may cause electric shock or movement anomalies.

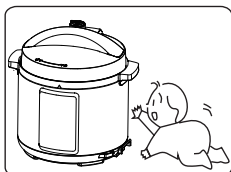


Place the appliance in a location out of reach of infants

- Place the appliance in a location out of reach of infants.
- To avoid electric shock and scald.

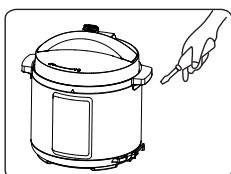

Modification is prohibited

- Modification or repair by non-professionals is prohibited.
- Violation may cause a fire or electric shock.
- Repair or replacement of parts shall be made in a designated service center.

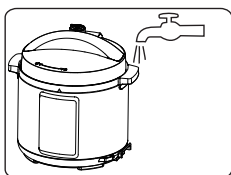

Products may not be immersed or sprinkled in water

- Doing so could cause electric shock and electrical short circuits.




Warning on Opening the lid

- When the electric pressure cooker is not working, there isn't pressure in the pot, the float valve is down;
- When the electric pressure cooker is working, pressure in the cooker rises, float valve ascends; do not fiercely open the lid before the pressure has been completely released;
- If it is difficult to open the lid, please do not open it fiercely, otherwise, it may cause scalding or physical injury.



Safety Precautions

Warning

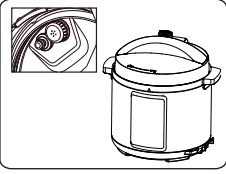


Check periodically

- Be sure to check periodically the block proof cover and exhaust valve core to make sure that they are not be blocked;
- Do not cover the exhaust valve with heavy object or replace it with other object.




Caution

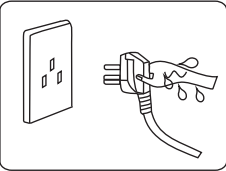


Never pull the plug with a wet hand

- To avoid electric shock.

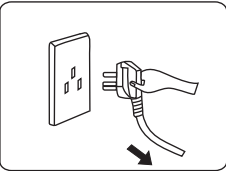


When pulling the plug, you must pinch the plug

- When pulling the plug, you must pinch the plug;
- Do not pull the power cord, otherwise it will damage the cord, causing electric shock and short circuit.

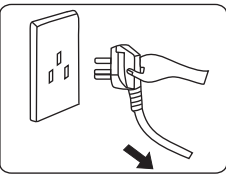

Unplugging when not in use

- Otherwise, it may produce leakage, fire or failure.

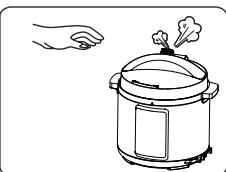


In working, never move your hands to close to the exhaust port.

- In cooking process, never move your hands to close to the exhaust port to avoid burns.
- During cooking, do not cover the vent with a cloth and other items.



Safety Precautions


Caution

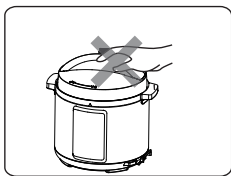

When the cooker is working, please do not touch the lid




- When the cooker is working, lid has high temperature, do not touch it;
- Otherwise, it may possibly cause scalding.

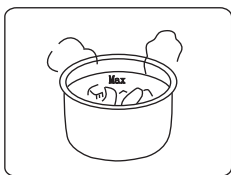

The total amount of food and water can not exceed Max scale


- The total amount of food and water can not exceed Max scale, otherwise food may be cooked unfamiliar, or cause malfunction.

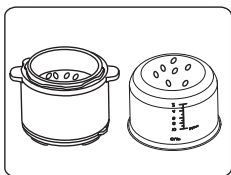

Do not use a pot other than the dedicated pot




- When there is foreign object on the bottom of pot and heating plate surface, remove the foreign object before use.
- Otherwise, it may cause overheating and work abnormalities etc.

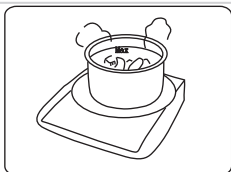

Do not put the inner pot on other appliance for heating



- In order to avoid deformation or fault.
- Please use the special inner pot.

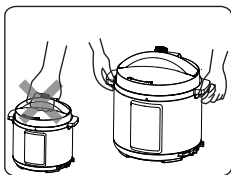

When moving the product, please hold the handle of cooker body



- When moving the product, do not directly hold the handle of lid for avoiding lid dropping.

Do not use in the following locations



- Do not use in unstable locations;
- Do not use in locations near water and fire;
- Do not use near walls and furniture;
- Do not use in locations exposed to direct sunlight and oil splatter.
- Do not approach the stove for avoiding fire.


Environment For Storing The Product

- Periodically clean the cooker and remove oil and dirt if it is stored on the table.
- Put the electric pressure cooker 30cm away from other kitchen appliances.

Clean After Use

1. Clean after each use.
2. Before cleaning and maintenance, please unplug the power cord until the product cools.
3. Remove the lid and inner pot, clean with detergent first, then rinse well with water, and wipe dry with a soft cloth.
4. Clean the internal side of the lid with water, the seal ring, block proof cover, exhaust valve core and float valve can be removed for washing, timely and correctly install them after washing, and then dry the internal side of lid with cloth.
5. Wipe clean the cooker body with a rag, and it is prohibited to soak the cooker body in water or spray water to it.

Electrical Schematic Diagram

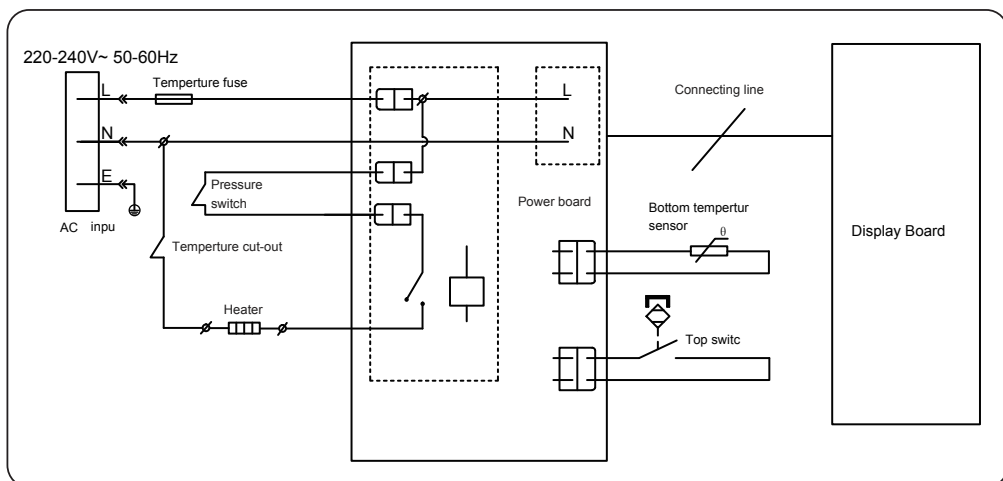

Troubleshooting

When followings occur, it is not the cooker fault, please carefully check once before sending it for repair.

Troubleshooting


S/N	Problem		Reason	Solution
1	Difficult to close the lid		Sealing ring not installed properly	Position the sealing ring well
			The floater valve clamps the push rod	Lightly push the push rod
2	Difficult to open the lid		Float valve in the popped-up position	Press the float valve lightly with a chopstick.
			Pressure exists inside the cooker	Open the lid after the pressure is completely released.
3	Steam leaks from the lid		Sealing ring installed improperly	Install the sealing ring as required
			Food debris attached to the sealing ring	Clean the sealing ring
			Sealing ring damaged	Replace the sealing ring
			The lid is not closed correctly	Close the lid correctly
4	Steam leaks from float valve		Food debris on the float valve gasket	Clean the float valve gasket
			Float valve gasket worn-out	Replace the float valve gasket
5	Float valve unable to rise		Too little food and water in inner pot	Add water and food according to the recipe
			Steam leaks from the lid or exhaust valve	Send to the service center for repair
6	Steam comes out from exhaust valve non-stop		Exhaust valve not in sealing position	Turn the exhaust valve to the sealing position
			Pressure control fails	Send to the service center for repair
7	Power indicator doesn't light on		Power socket bad contact	Please check the power socket
8	All indicators flas	Display screen displays E1	Bottom sensor fault	Send to the service center for repair
		Display screen displays E2		
		Display screen displays C1	High temperature since there isn't water in the inner pot	Add water according to the requirement
			High temperature since there isn't water in the inner pot	Put the inner pot correctly
		Display screen displays E8	Pressure switch fault	Send to the service center for repair
9	Rice half cooked or too hard		Too little water	Add water accordingly
			Lid opened prematurely	After cooking cycle completes, leave the lid on for 5 more minutes.
10	Rice too soft		Too much water	Reduce water accordingly

——If the fault is not removed after above check, please contact our authorized service center for repair.

Note: All contents of this document have been carefully checked. Any technical improvements shall be placed in the revised manual without notice; for any changes in appearance and color, those of the actual product shall prevail.



电压力锅

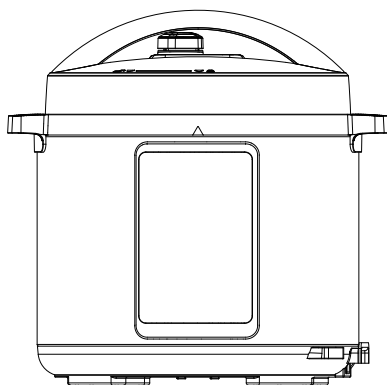

使用说明书

MY-CS6019WP

目录

重要保证	1
产品技术参数	5
产品结构	5
使用前说明	6
准备烹饪	8
功能选择	10
操作指南	11
保温功能	18
日常检查与维护	18
安全注意事项	19
产品储存环境	23
使用后的清洁	23
电气原理图	23
故障排除	24

重要提示：请在使用本产品之前仔细阅读说明书，并保存以备日后参考。
(图片仅供参考，实际产品可能与图片所示不同。)

重要保证

⚠ 注意事项

1. 如果电源线损坏，必须用制造商或其服务代理提供的特殊电线或配件进行更换。
2. 本产品只限家庭使用。禁止在户外使用。
3. 将该电器放在远离儿童的地方。请勿让儿童使用该电器。
4. 此设备不得由儿童使用。请将该电器及其电线放在远离儿童的地方。
5. 在受监管的情况下，以及得到安全使用本产品的指导后，以及明确了解相关危害的情况下，身体、感官或智力受损，或缺乏经验的人员可以使用本产品。
6. 禁止儿童玩弄本产品。
7. 请勿将本产品的任何部位置于水或其他液体中。
8. 清洗、维护、重新安装之前或不适用时，请关闭电饭煲并拔掉插头。
9. 本产品只限于家庭或以下类似场合使用：
 - 商店的员工茶水间、办公室或其他工作场所；
 - 农场；
 - 酒店、汽车旅馆以及其他住宿场所；
 - 住宿和早餐型环境。
10. 应当定期检查用于排放蒸汽的压力调节器，以便确保其不会堵塞。
11. 压力降至足够低之前，不得打开容器。
12. 本电器不可使用外部预约器或单独的遥控系统来进行操作。

重要保证

⚠ 注意事项

13. 烹饪用具应当妥善地放置在适当的位置，并且保持稳定的状态，手柄的摆放，应当避免热液体向外溢出。
14. 使用后，发热元件的表面会产生余热，请勿触摸。
15. 如果锅盖没有盖好，烹饪用具无法获得压力；内部压力过高时，锅盖无法打开。
16. 使用时，请勿让儿童靠近该压力锅。
17. 请勿将该压力锅放入加热的烤箱中。
18. 移动压力锅时，应当格外小心、谨慎。请勿接触热表面。使用手柄和旋钮。如有必要，采取防护措施。
19. 请勿将该压力锅用于除预设用途之外的其他用途。
20. 该电器在压力的作用下进行烹饪。该压力锅如果使用不当，可能会烫伤。确保该压力锅在加热之前已正确地关闭，请参阅“使用说明”。
21. 切勿强行打开该压力锅。确保内部压力完全降低之前，请勿打开该压力锅。请参见“使用说明”。
22. 切勿在没有加水或食物的情况下使用该压力锅，但“香煎”功能除外，否则，将对压力锅造成严重的损坏。
23. 盛放水或食物时，请勿超出该压力锅容量的 $\frac{2}{3}$ 。烹饪过程中，如果食物（如米饭或脱水蔬菜）发生膨胀，请勿超出该压力锅容量的一半以上。
24. 根据“使用说明”的规定，使用合适的热源。

重要保证

注意事项

25. 有些带皮的肉类（例如，牛舌）在压力作用下可能发生膨胀，烹饪后，请勿刺破外皮肿胀的肉；可能导致烫伤。
26. 烹饪面团食物时，在打开锅盖之前，轻轻地摇动该压力锅，以免食物排出。
27. 每次使用前，检查阀门是否阻塞。请参见“使用说明”。
28. 切勿在加压模式下使用该压力锅，进行深度或浅度的食物煎炸。
29. 除了“使用说明”中规定的维护说明之外，请勿对安全系统进行篡改。
30. 只能根据相应的产品型号，使用制造商提供的备件。需要特别注意的是，使用由同一制造商指定的相互兼容的锅体和锅盖。
31. 妥善保管本说明书。
32. 警告：避免接头部位泄漏。
33. 警告：滥用可能会造成伤害。

重要保证

警告



1. 排放压力时，请在操作过程中让脸或手远离救生管和锅盖，以免烫伤。
2. 吃东西之前，拔下电源插头。
3. 烹饪过程中或加热状态下，请勿触摸锅盖。
4. 切勿堵住夹紧位置的周边空间，以确保安全。
5. 切勿在浮子阀松动或内部增压时打开该压力锅。
6. 打开锅盖时，请留意从压力排放阀流出的热水。

环境保护




该设备不得与普通生活垃圾一起处理。在其使用寿命结束时，必须将设备正确送至回收电气和电子设备的收集点。通过收集和回收旧设备，您正在为保护我们的自然资源做出重要贡献，并提供环保和健康的处理。

产品技术参数

型号	容量	电源	额定功率	内胆尺寸	工作压力	保温温度
MY-CS6019WP	6L	220-240V~ 50-60Hz	1000W	8.66"	70kPa	140° F~176° F
配件	汤匙 	汤匙 	使用说明书 	量杯 	电源线组件 	


产品结构

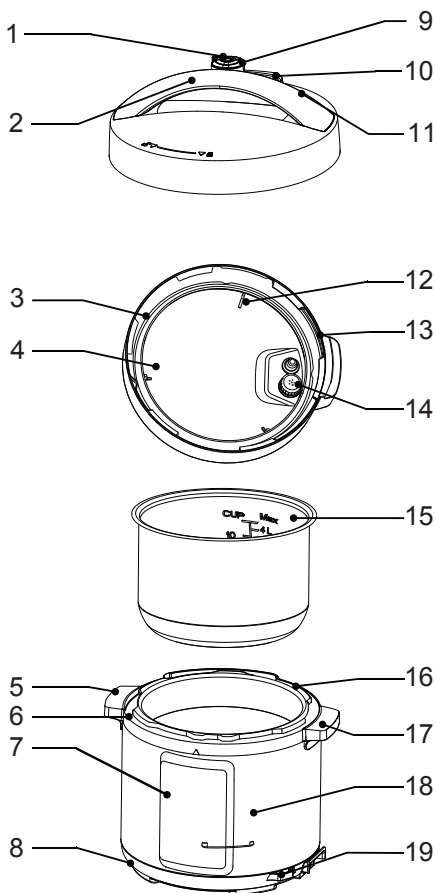

编号	说明
1	排气阀手柄
2	上盖手柄
3	密封圈
4	锅盖的内侧
5	③储水盒（注释）
6	壳盖
7	控制盒
8	底座
9	排气阀口
10	浮子阀
11	①排气阀（注释）
12	密封圈支架
13	②密封门（注释）
14	防堵盖
15	内胆
16	外胆
17	锅体手柄
18	锅体
19	电源线插座

产品结构

浮子阀结构示意图

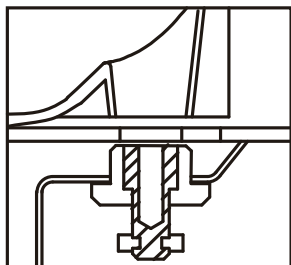

提示：

1. 每次使用之前，请确认浮子阀、防堵盖和密封圈是否正确安装。
2. 每次将内胆放入锅体之前，请将内胆外侧和外侧内侧的污垢和水分擦拭干净。
3. 请将该产品与锅体手柄一同移动。
4. 请用布将壳盖上的水分擦拭干净。

🔑 注意：

- ① 排气阀：从锅盖上拔出排气阀。用刷子和布，对排气阀的内侧以及锅盖的排气阀和浮子阀进行清洁，每个月至少一次。
- ② 密封门：用洗涤剂 and 刷子，清除密封门上的油渍和污垢。剩余的油渍和污垢可能呈淡黄色。清洗之后，密封门可能恢复到原来不锈钢的颜色。建议每两个月清洁一次密封门。
- ③ 储水盒：烹饪后，蒸汽可能以水的形式留在内胆的储水盒中。为避免产生异味，请移除水箱内的水分，并且用干净的布加以清洁。

使用前说明

第一次使用时，请从锅体中取出所有配件，仔细阅读《用户手册》，特别是为避免造成财产损失或人身伤害的使用操作及其注意事项。

使用前说明

操作部分



压力保持功能选项

此功能下，按“口感”按钮，根据个人需求，对“口感”进行调整。

烹饪预约功能

如果按“+”/“-”按钮，以便对压力保持的时间进行调整，需要进入“手动”状态。

延时预约功能


按“+”/“-”按钮，设置完成烹饪的时间。

拆卸并安装防堵盖和密封圈

拆卸并安装防堵盖



密封圈的拆卸和安装

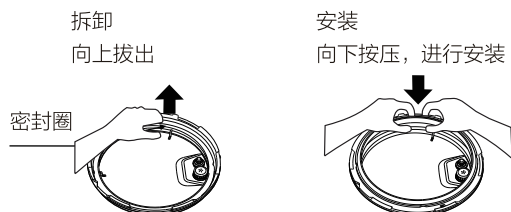

1. 每次使用前，检查密封圈和防堵盖是否正确地安装在上盖中。
2. 使用后，请对密封圈及防堵盖的周围加以清洁，以免堵塞锅盖。应当保持清洁，以免出现异味。

1. 请勿拉动密封圈，否则，变形的密封圈可能对密封圈的功能和加压作用产生不利的影响。
2. 请勿使用已损坏的密封圈。请前往正规的维修机构，进行更换。

使用前说明

不锈钢内胆的使用和维护

1. 请勿空置

如果长时间空置，内胆可能发黄或带有斑点，底部可能变形。

2. 请勿用该压力锅长时间储存酸、碱和腌制食品。

虽然内胆具有良好的防腐性能，但也可能造成一定程度的腐蚀，建议保温的时间不超过24小时。

3. 保持清洁，以便延长该压力锅的使用寿命。

请勿将该压力锅长时间浸入水中。

用肥皂、弱性清洁剂或温水清洗内胆，以便清除灰尘、油渍和污垢。

4. 请勿用钢铲将该压力锅刮伤。

用水将底部烧焦的食物进行软化，然后将其清除干净。

提示：

明亮的内胆在使用之前，具有光滑且经过抛光的表面。经过长时间的使用，用硬物进行清洗之后，表面上的标识变得不清晰。这属于正常现象，不会影响该产品的功能。

（用户应当根据产品型号和配置，选择性地读取该功能。）


准备烹饪

1 正确打开锅盖。

- 握住上盖的手柄，将其逆时针转动大约30°，直到上盖边缘的“▼”标识对准外壳盖边缘的“▲”标识，然后提起上盖。

2 检查锅盖的组件和附件是否安装正确。

- 检查浮子阀和排气阀是否堵塞，确认密封圈和防堵盖是否安装正确。

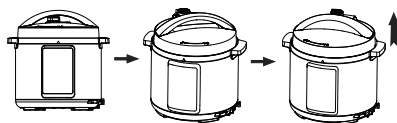

准备烹饪

3 取出内胆，将食物和水放入内胆中。

- 食物和水的总量不得超过内胆上标识的最大值。
- 烹饪时，米饭和水的总量不得超过内胆的最大值。

4 把内胆放入压力锅内。





- 擦拭内胆的外表面，该电压力锅的内表面不允许有异物和水；
- 将内胆左右转动，以便确保与加热板进行良好的接触。

5 安全关闭锅盖。

- 关闭锅盖之前，检查密封环是否安装正确。
- 握住上盖的手柄，将上盖边缘的“▼”标识对准外壳盖边缘的“▲”标识，将上盖水平放置在锅体上，顺时针转动上盖，与锁定位置大约成 30° 角，并且将外壳盖边缘的“▲”标识对准锅盖上的“⊗”标识。

6 摆放好排气阀。

- 该压力锅开始工作时，请将排气阀转动至密封处，使得该电压力锅保持密封状态；
- 手动排气时，请将排气阀手柄转动至排气处，使得该电压力锅保持排气状态；排气时，请勿将手或脸位于排气阀口的上方；
- 在该压力锅开始工作之前，检查浮子阀是否下降（在加热之前，浮子阀处于关闭/非工作状态）。

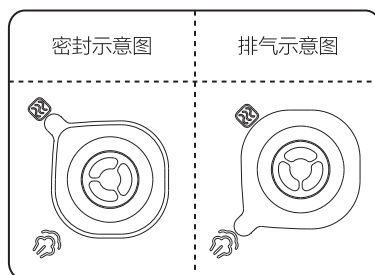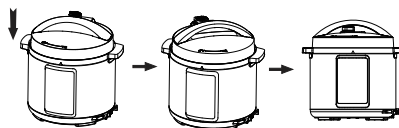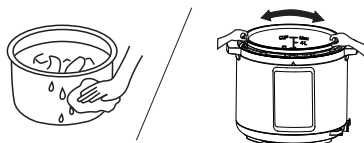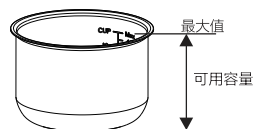

功能选择

一般功能

1. 按照第8页所列的方法，准备烹饪。
2. 开启：如果在使用时按钮失灵，请确认锅盖是否在正确的位置。如果该系列产品的锅盖未在正确位置关闭，则按钮失灵。
3. 待机状态下，按下按钮时，相应的指示灯将启动。“口感”指示灯亮。按“口感”按钮，可以选择“清香”、“标准”或“浓香”。然后，按“开始”按钮，开始烹饪。压力升高至设定压力时，保持稳定的状态。显示时间表，并且开始倒计时。
4. 烹饪后，该压力锅可以自动进入保温状态。保温时间不得超过**24**小时。
5. 烹饪后，相应功能的指示灯熄灭，保温指示灯启动，该压力锅发出声音，并且进入保温状态。待机状态下，按“保温”按钮，保温指示灯启动，该压力锅发出声音，并且进入保温状态。

提示：

任何状态下，按“停止”按钮，取消当前的工作状态，并且返回至待机状态。

该压力锅在工作时，发出“咔嚓”的声音，这属于正常现象，请放心使用。

烹饪少量食物时，打开锅盖时，可能将内胆一并抬起，请摇动锅盖，使内胆置于锅体的下部位置，然后取下锅盖。

功能选择

安全打开锅盖

1. 切断电源或拔下电源插头。
2. 排气法
 - A. 快速打开锅盖。

将排气阀转动至排气处，进行排气，直至浮子阀下降。（用于非流体食物）
 - B. 打开锅盖的基本方法

使该电压力锅保持自然冷却的状态，直到浮子阀下降。
3. 打开盖子

用左手逆时针转动上盖，将其转动至锅盖开启的限位，用右手抬起上盖，打开锅盖。



在锅内的压力完全释放之前，请勿打开锅盖。如果难以打开锅盖，请勿强行将其打开。

转动排气阀时，请勿将其拔出。



在液体食物（粥和汤）烹饪之后，请勿转动排气阀，请切断电源，使其自然冷却，直到浮子阀下降后，再打开锅盖。

在烹饪大量食物之后，请勿立即排气，建议在打开锅盖之前，保温一段时间。

操作指南

功能	操作指南
待机	启动电源后，该产品将自动进入待机状态，数字屏幕上显示“----”。
米饭	<ol style="list-style-type: none">1. 待机状态下，按“米饭”按钮，“米饭”灯闪烁，“标准”灯亮；按“口感”按钮，即可获得不同的口感形式，从“浓香”到“清香”不等。按“开始”按钮，该产品自动进行烹饪。只要图标  是亮的（开启），并且压力上升至工作压力，数字屏幕就开始倒计时。2. 预设烹饪：待机状态下，按“米饭”按钮，然后按“预约”按钮，图标为  闪烁，数字屏幕上显示预设时间“02:00”。按“预约”按钮，在“时”和“分”之间切换，然后按“+”或“-”按钮，增加或减少预设时间，范围从2H到24H不等。按“开始”按钮，该装置开始计算延迟时间。




操作指南

功能	操作指南
米饭	<p>倒计时结束时，该程序完成。自动启动预设功能——蒸制“米饭”，数字屏幕上显示结束时间，并且开始倒计时。</p> <p>3. 停止烹饪：按“停止”按钮，退出工作程序。</p>
糙米饭	<p>1. 待机状态下，按“糙米”按钮，“糙米”灯闪烁，“标准”灯亮；按“口感”按钮，即可获得不同的口感形式，从“浓香”到“清香”不等。按“开始”按钮，该产品自动进行烹饪。只要图标是亮的（开启），并且压力上升至工作压力，数字屏幕就开始倒计时。</p> <p>2. 预设烹饪：待机状态下，按“糙米”按钮，然后按“预约”按钮，图标为闪烁，数字屏幕上显示预设时间“02:00”。按“预约”按钮，在“时”和“分”之间切换，然后按“+”或“-”按钮，增加或减少预设时间，范围从2H到24H不等。按“开始”按钮，该装置开始计算延迟时间。倒计时结束时，程序就完成了。</p> <p>3. 停止烹饪：按“停止”按钮，退出工作程序。</p>
蒸煮	<p>1. 待机状态下，按“蒸”按钮，“蒸”灯闪烁，“标准”灯亮；按“口感”按钮，即可获得不同的口感形式，从“浓香”到“清香”不等。按“开始”按钮，该产品自动进行烹饪。只要图标是亮的（开启），并且压力上升至工作压力，数字屏幕就开始倒计时。</p> <p>2. 预设烹饪：待机状态下，按“蒸”按钮，然后按“预约”按钮，图标为闪烁，数字屏幕上显示预设时间“02:00”。按“预约”按钮，在“时”和“分”之间切换，然后按“+”或“-”按钮，增加或减少预设时间，范围从2H到24H不等。按“开始”按钮，该装置开始计算延迟时间。倒计时结束时，程序就完成了。</p> <p>3. 停止烹饪：按“停止”按钮，退出工作程序。</p>

操作指南

功能	操作指南
煲汤	<ol style="list-style-type: none"> 1. 待机状态下，按“煲汤”按钮，“煲汤”灯闪烁，“标准”灯亮；按“口感”按钮，即可获得不同的口感形式，从“浓香”到“清香”不等。按“开始”按钮，该产品自动进行烹饪。只要图标  是亮的（开启），并且压力上升至工作压力，数字屏幕就开始倒计时。 2. 预设烹饪：待机状态下，按“煲汤”按钮，然后按“预约”按钮，图标为  闪烁，数字屏幕上显示预设时间“02:00”。按“预约”按钮，在“时”和“分”之间切换，然后按“+”或“-”按钮，增加或减少预设时间，范围从2H到24H不等。按“开始”按钮，该装置开始计算延迟时间。倒计时结束时，程序就完成了。 3. 停止烹饪：按“停止”按钮，退出工作程序。
炖煮	<ol style="list-style-type: none"> 1. 待机状态下，按“炖煮”按钮，“炖煮”灯闪烁，“标准”灯亮；按“口感”按钮，即可获得不同的口感形式，从“浓香”到“清香”不等。按“开始”按钮，该产品自动进行烹饪。只要图标  是亮的（开启），并且压力上升至工作压力，数字屏幕就开始倒计时。 2. 预设烹饪：待机状态下，按“炖煮”按钮，然后按“预约”按钮，图标为  闪烁，数字屏幕上显示预设时间“02:00”。按“预约”按钮，在“时”和“分”之间切换，然后按“+”或“-”按钮，增加或减少预设时间，范围从2H到24H不等。按“开始”按钮，该装置开始计算延迟时间。倒计时结束时，程序就完成了。 3. 停止烹饪：按“停止”按钮，退出工作程序。
肉类/排骨	<ol style="list-style-type: none"> 1. 待机状态下，按“肉类/排骨”按钮，“肉类/排骨”灯闪烁，“标准”灯亮；按“口感”按钮，即可获得不同的口感形式，从“浓香”到“清香”不等。按“开始”按钮，该产品自动进行烹饪。只要图标  是亮的（开启），并且压力上升至工作压力，数字屏幕就开始倒计时。




 
操作指南

功能	操作指南
肉类/排骨	<ol style="list-style-type: none"> 预设烹饪：待机状态下，按“肉类/排骨”按钮，然后按“预约”按钮，图标为  闪烁，数字屏幕上显示预设时间“02:00”。按“预约”按钮，在“时”和“分”之间切换，然后按“+”或“-”按钮，增加或减少预设时间，范围从2H到24H不等。按“开始”按钮，该装置开始计算延迟时间。倒计时结束时，程序就完成了。 停止烹饪：按“停止”按钮，退出工作程序。
鸡肉	<ol style="list-style-type: none"> 待机状态下，按“鸡肉”按钮，“鸡肉”灯闪烁，“标准”灯亮；按“口感”按钮，即可获得不同的口感形式，从“浓香”到“清香”不等。按“开始”按钮，该产品自动进行烹饪。只要图标  是亮的（开启），并且压力上升至工作压力，数字屏幕就开始倒计时。 预设烹饪：待机状态下，按“鸡肉”按钮，然后按“预约”按钮，图标为  闪烁，数字屏幕上显示预设时间“02:00”。按“预约”按钮，在“时”和“分”之间切换，然后按“+”或“-”按钮，增加或减少预设时间，范围从2H到24H不等。按“开始”按钮，该装置开始计算延迟时间。倒计时结束时，程序就完成了。 停止烹饪：按“停止”按钮，退出工作程序。
鱼类	<ol style="list-style-type: none"> 待机状态下，按“鱼类”按钮，“鱼类”灯闪烁，“标准”灯亮；按“口感”按钮，即可获得不同的口感形式，从“浓香”到“清香”不等。按“开始”按钮，该产品自动进行烹饪。只要图标  是亮的（开启），并且压力上升至工作压力，数字屏幕就开始倒计时。 预设烹饪：待机状态下，按“鱼类”按钮，然后按“预约”按钮，图标为  闪烁，数字屏幕上显示预设时间“02:00”。按“预约”按钮，在“时”和“分”之间切换，然后按“+”或“-”按钮，增加或减少预设时间，



操作指南

功能	操作指南
鱼类	<p>范围从2H到24H不等。按“开始”按钮，该装置开始计算延迟时间。倒计时结束时，程序就完成了。</p> <p>3. 停止烹饪：按“停止”按钮，退出工作程序。</p>
轻煎	<p>在待机状态下，按“轻煎”按钮，“轻煎”灯闪烁，数字屏幕上显示“0:20”；按“口感”按钮，可以得到不同的口感形式：“浓香”，屏幕上显示“0:30”；“清香”，屏幕上显示 “0:10”。按“开始”按钮，该产品自动进行烹饪。数字屏幕在图标  开启的情况下进行倒计时。按“停止”按钮，退出工作程序。</p>
蛋糕	<p>待机状态下，按“蛋糕”按钮，“蛋糕”灯闪烁，“标准”灯亮；按“口感”按钮，即可获得不同的口感形式，从“浓香”到“清香”不等。按“开始”按钮，该产品自动进行烹饪。数字屏幕在图标  开启的情况下进行倒计时。</p>
慢炖	<p>在待机状态下，按“慢炖”按钮，“慢炖”灯闪烁，数字屏幕上显示“6:00”；按“口感”按钮，可以得到不同的口感形式：“浓香”，屏幕上显示“8:00”；“清香”，屏幕上显示“4:00”。按“开始”按钮，该产品自动进行烹饪。数字屏幕在图标  开启的情况下进行倒计时。按“停止”按钮，退出工作程序。</p>

操作指南

功能	操作指南
豆类	<ol style="list-style-type: none"> 1. 待机状态下，按“豆类”按钮，“豆类”灯闪烁，“标准”灯亮；按“口感”按钮，即可获得不同的口感形式，从“浓香”到“清香”不等。按“开始”按钮，该产品自动进行烹饪。只要图标  是亮的（开启），并且压力上升至工作压力，数字屏幕就开始倒计时。 2. 预设烹饪：待机状态下，按“豆类”按钮，然后按“预约”按钮，图标为  闪烁，数字屏幕上显示预设时间“02:00”。按“预约”按钮，在“时”和“分”之间切换，然后按“+”或“-”按钮，增加或减少预设时间，范围从2H到24H不等。按“开始”按钮，该装置开始计算延迟时间。倒计时结束时，程序就完成了。 3. 停止烹饪：按“停止”按钮，退出工作程序。
蔬菜	<ol style="list-style-type: none"> 1. 待机状态下，按“蔬菜”按钮，“蔬菜”灯闪烁，“标准”灯亮；按“口感”按钮，即可获得不同的口感形式，从“浓香”到“清香”不等。按“开始”按钮，该产品自动进行烹饪。只要图标  是亮的（开启），并且压力上升至工作压力，数字屏幕就开始倒计时。 2. 预设烹饪：待机状态下，按“蔬菜”按钮，然后按“预约”按钮，图标为  闪烁，数字屏幕上显示预设时间“02:00”。按“预约”按钮，在“时”和“分”之间切换，然后按“+”或“-”按钮，增加或减少预设时间，范围从2H到24H不等。按“开始”按钮，该装置开始计算延迟时间。倒计时结束时，程序就完成了。 3. 停止烹饪：按“停止”按钮，退出工作程序。

操作指南

功能	操作指南
手动	<ol style="list-style-type: none">1. 在待机状态下，按“手动”按钮，“手动”指示灯闪烁，数字屏幕上显示默认的工作时间“30”，也可以按“+”或“-”按钮，调整工作时间的范围（从0到60不等）。按“开始”按钮，该产品自动进行烹饪。只要图标  是亮的（开启），并且压力上升至工作压力，数字屏幕就开始倒计时。2. 预设烹饪：待机状态下，按“手动”按钮，然后按“手动”按钮，图标为  闪烁，数字屏幕上显示预设时间“2:00”。按“预约”按钮，在“时”和“分”之间切换，然后按“+”或“-”按钮，增加或减少预设时间，范围从2H到24H不等。按“开始”按钮，该装置开始计算延迟时间。倒计时结束时，程序就完成了。3. 停止烹饪：按“停止”按钮，退出工作程序。
保温	<p>待机状态下，按“保温”按钮，进入保温状态。“保温”指示灯闪烁，数字屏幕上显示“----”，然后按“开始”按钮，进入工作状态，最长时限为24小时，然后，该装置自动进入待机状态。按“停止”按钮，退出工作程序。</p>

保温功能



1. 烹饪后，该电压力锅自动进入保温状态；保温状态下，“保温”指示灯是亮的；
2. 待机状态下，也可以按“保温”按钮，进入保温状态；
3. 保温状态下的温度是140°F~176°F；

日常检查与维护

请对该产品进行仔细的检查和维护，以便其使用寿命更长。

如果发生以下情况	解决方案
<ul style="list-style-type: none">• 电源线和插头发生膨胀、变形、损坏和变色。• 电源线和插头的某个部分特别烫。• 电源线非常松动，电力的供应时断时续。• 该电压力锅异常发热，并且产生异味。• 供电时，伴有异常的噪音或振动。	停止使用，并由正规的维修中心进行维修。
<ul style="list-style-type: none">• 插头或插座上有灰尘或污垢。	清除灰尘或污垢。


安全注意事项

为避免造成人身伤害和财产损失，请务必遵守以下安全防范规定。

• 标识含义：


 表示“禁止”的事项	 一般禁止	 禁止拆卸	 严禁湿手操作
	 严禁接触	 禁止喷水	
 表示“强制性”的事项	 必须执行	 卸下电源插头	

• 如果忽视以下安全警示，错误地使用该产品，所产生的危险包括两个等级。

 **警告** | 如果不遵守这些安全警示，可能导致死亡或严重的人身伤害。

 **注意事项** | 如果不遵守这些安全警示，可能造成人身伤害或财产损失。


警告

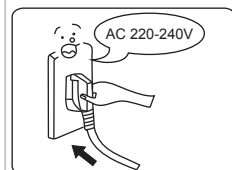

使用220-240V~50-60Hz的电源插座




- 如果所使用的交流电非220-240V~50-60Hz，可能发生火灾或触电。
- 如果使用了不良的插座，可能发生火灾。

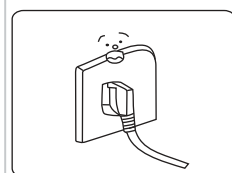

应使用独立插座



- 带有接地线的插座（额定电流超过10A），应当单独使用；
- 如果与其他电器共用一个插座，该插座可能异常发热，并导致火灾。

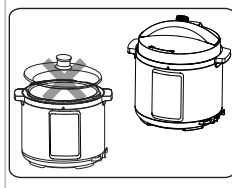


严禁使用非原装锅盖



- 严禁使用非原装锅盖加热，并且在此过程（开启状态）中，不允许使用非原装锅盖。
- 否则，可能导致触电或安全事故。

安全注意事项


⚠ 警告

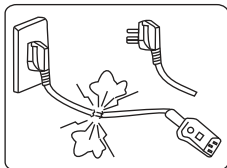

若电源线已经损坏，请停止使用




- 用特殊的软线代替损坏的电源线，或用从制造商或正规的维修中心那里购买的特殊组件代替损坏的电源线。

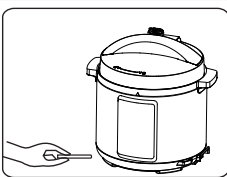

请勿放置异物




- 严禁在缝隙中插入金属屑、针头和其他异物。
- 否则，可能导致触电或运动异常。

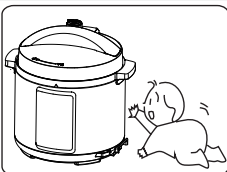

将产品放在远离婴幼儿的地方




- 将产品放在远离婴幼儿的地方。
- 避免触电和烫伤。

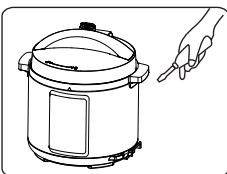

禁止改装



- 禁止非专业人员对该压力锅进行改装或维修。
- 违规操作可能导致火灾或触电。
- 如果需要维修或更换部件，应当前往指定的服务中心。

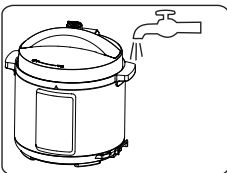

该产品不得浸入水中，也不得在其上洒水



- 否则，可能导致触电和电气短路。


打开锅盖安全警示



- 该电压力锅不工作时，锅内没有压力，浮子阀处于关闭/非工作状态；
- 该电压力锅工作时，锅内压力升高，浮子阀上升；在压力完全释放之前，请勿强行打开锅盖。
- 如果锅盖打开困难，请勿强行打开，否则，可能导致烫伤或造成人身伤害。

安全注意事项

⚠ 警告

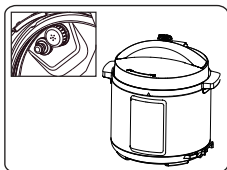


定期检查

- 请务必定期检查防堵盖和排气阀芯，确保其不被堵塞；
- 请勿用重物覆盖排气阀，或用其他物体对其进行更换。




⚠ 注意事项

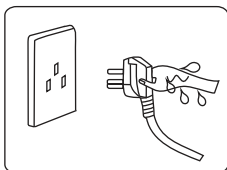


切勿用湿手拔插头

- 以防触电

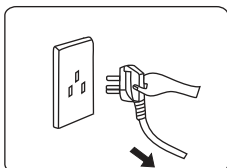


拔出插头时，必须捏住插头

- 拔出插头时，必须捏住插头；
- 请勿拉动电源线，否则，可能损坏电源线，从而造成触电和短路。

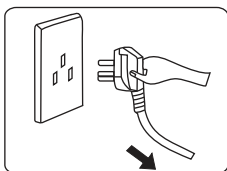

不用时，拔下插头

- 否则，可能发生泄漏、火灾或故障。

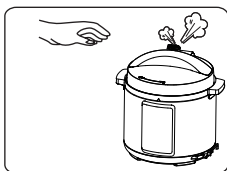


该压力锅在工作时，切勿将手移至靠近排气阀口的地方

- 烹饪过程中，切勿将手靠近排气阀口，以免烫伤。
- 烹饪过程中，请勿用布等物盖住排气阀口。




安全注意事项

⚠ 注意事项

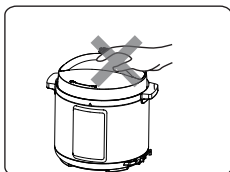


当该压力锅工作时，请勿触摸锅盖

- 该压力锅工作时，锅盖的温度很高，请勿触摸。
- 否则，可能导致烫伤。

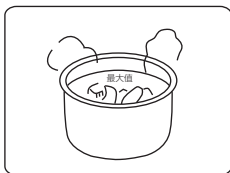


食物和水的总量不得超过最大规模

- 食物和水的总量不得超过最大规模，否则，食物可能发生变形，或发生故障。

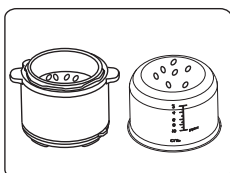


请勿使用除专用锅之外的锅

- 如果锅底和加热盘的表面有异物，请在使用之前将异物清除。
- 否则，可能导致该压力锅过热和工作异常等。

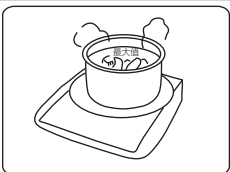

不要将内胆放在其他设备中进行加热

- 以免发生变形或故障。
- 请使用特殊的内胆。

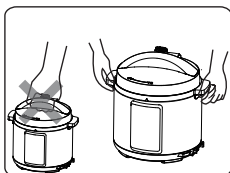

移动该产品时，请握住锅体手柄

- 移动该产品时，请勿直接握住锅盖的手柄，以免锅盖掉落。



如有下列情况，请勿使用本产品：

- 请勿在不稳定的地方使用该压力锅；
- 请勿在靠近水和火的地方使用该压力锅；
- 请勿在靠近墙壁和家具的地方使用该压力锅；
- 请勿在太阳直射和油污溅泼的地方使用该压力锅。
- 请勿将该压力锅靠近炉子，以免发生火灾。




产品储存环境

- 如将压力锅放在桌面上，应当定期清洁，清除油渍和污垢。
- 该电压力锅与其他厨房的电器应当保持**30厘米**的距离。

使用后的清洁

1. 每次使用后需清洁。
2. 清洁和维护前，请拔下电源线，直至产品冷却。
3. 取下锅盖和内胆，先用清洁剂清洁，然后用水冲洗干净，用软布擦拭干净。
4. 用水清洗锅盖内侧，取下密封圈、防堵盖、排气阀芯和浮子阀，进行清洗；清洗后，及时并正确地安装，然后用布将锅盖内侧擦拭干净。
5. 用抹布擦拭锅体，严禁将锅体浸泡在水中，或向其喷水。

电气原理图

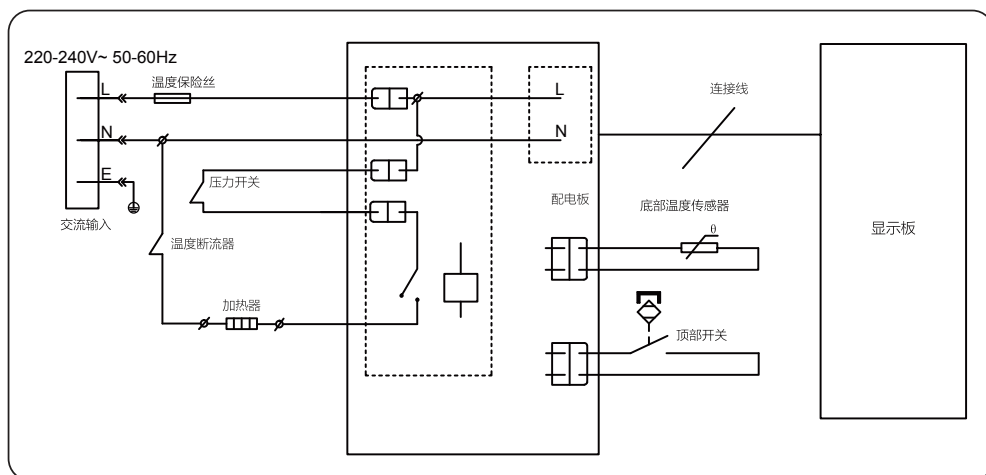

故障排除

如发生以下情况，并非压力锅发生故障，请在维修之前，对其进行一次仔细的检查。

故障排除

S/N	问题		原因	解决方案
1	锅盖关闭困难		密封圈安装不当	摆放好密封环
			浮子阀将推杆夹住	轻轻地推动推杆
2	锅盖打开困难		浮子阀处于弹起位置	用筷子轻轻地按下浮子阀
			电压力锅内有压力	压力完全释放后，打开锅盖
3	蒸汽从锅盖泄漏出来		密封圈安装不当	根据需要，安装密封圈
			密封圈上附着食物残渣	清洁密封圈
			密封环损坏	更换密封圈
			锅盖未正确关闭	正确地关闭锅盖
4	蒸汽从浮子阀泄漏出来		浮子阀垫片上的食物残渣	清洁浮子阀垫片
			浮子阀垫片磨损	更换浮子阀垫片
5	浮子阀无法上升		内胆中的食物和水，总量过少	根据食谱，添加水和食物
			蒸汽从锅盖或排气阀泄漏出去	送至服务中心进行维修
6	蒸汽不停地从排气阀排出		排气阀不在密封位置	将排气阀转至密封位置
			压力控制失败	送至服务中心进行维修
7	电源指示灯不亮		电源插座接触不良	请检查电源插座
8	所有指示灯闪烁	显示屏显示E1	底部传感器故障	送至服务中心进行维修
		显示屏显示E2		
		显示屏显示C1	由于内胆中没有水，因此，温度很高	根据要求加水
			由于内胆中没有水，因此，温度很高	正确放入内胆
		显示屏显示E8	压力开关故障	送至服务中心进行维修
9	米饭不熟或者太硬		水太少	适当添加水量
			过早打开锅盖	烹饪后，将锅盖再打开5分钟
10	米饭太软		水太多	适当减少水量

——如果进行上述检查后，仍然没有消除故障，请联系我公司授权的正规服务中心，进行维修。



注意：本文件的所有内容均经过仔细的检查。任何
技术改进都应纳入修订版手册中，恕不另行
通知；对外观和颜色做出任何更改时均以实
际产品为准。